




PARTS DEPOT

Nashville, Tennessee
 615-889-8900 / Fax: 615-547-1000
 www.Lochinvar.com

Replacement Parts List

**Commercial Gas Charger Series
 Models CNR/CLR 065-50 thru 090-100
 includes 076-075 & 085-100**

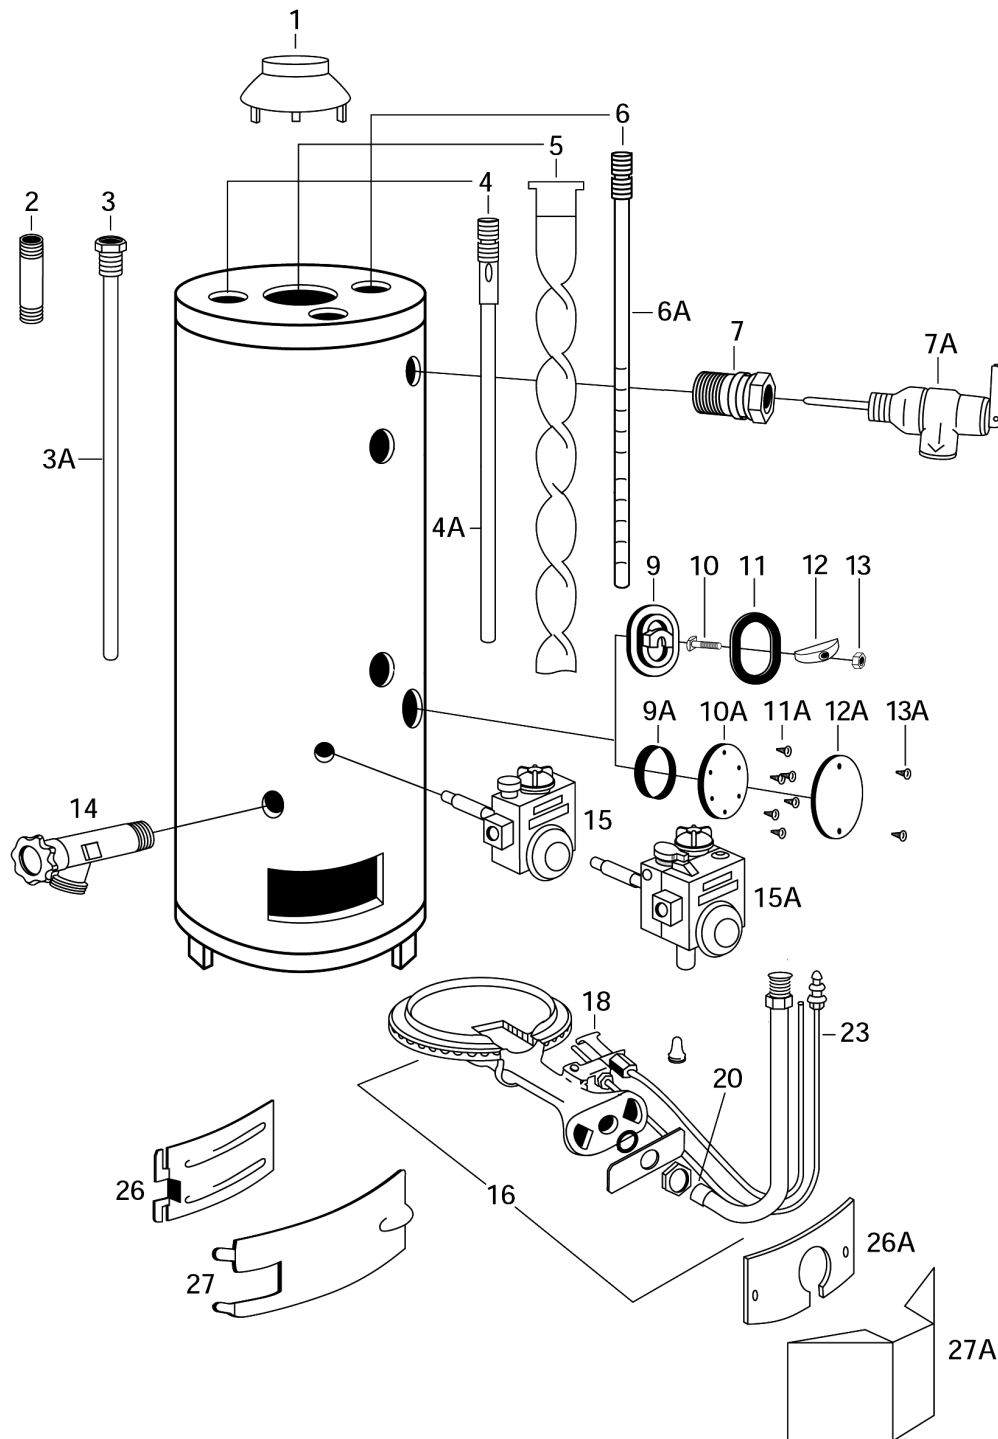

ITEM NO.	PART NO.	DESCRIPTION	MODEL NO.
1	DRH1021	DRAFT HOOD 4"	ALL
2	WTR1082	NIPPLE, HOT WATER OUTLET	065-050
3	WTR1013	ANODE ROD MAGNESIUM, HEX HEAD	076-075 to 090-100
3A	WTR1046	ANODE ROD ALUMINUM, HEX HEAD	076-075 to 090-100
4	WTR1060	ANODE ROD MAGNESIUM, HEAT TRAP	065-050
4A	WTR1044	ANODE ROD ALUMINUM, HEAT TRAP	065-050
5	JKT1055	FLUE BAFFLE	065-050
5	JKT1070	FLUE BAFFLE	076-075 & 080-075
6	WTR1018	DIP TUBE	065-050
6	WTR1100	DIP TUBE	076-075 & 080-075
6	WTR1020	DIP TUBE	085-100 & 090-100
7	MSC1060	RELIEF VALVE EXTENDER	ALL
7A	RLV1001	TEMPERATURE & PRESSURE RELIEF VAVLE	ALL
9	WTR1102	HANDHOLE, CRAB (after serial # LA)	085-100 & 090-100
9A	GKT1010	GASKET HANDHOLE	076-075 & 080-075
9A	GKT1010	GASKET HANDHOLE (before serial # LA)	090-100
10	BLT1020	BOLT CRAB HANDHOLE (after serial # LA)	085-100 & 090-100
10A	WTR1016	HANDHOLE, COVER	076-075 & 080-075
10A	WTR1016	HANDHOLE, COVER (before serial # LA)	090-100
11	GKT1009	GASKET HANDHOLE (after serial # LA)	085-100 & 090-100
11A	BLT1019	BOLT HANDHOLE WTR1101	076-075 & 080-075
11A	BLT1019	BOLT HANDHOLE WTR1101 (before serial # LA)	090-100
12	WTR1103	CLAMP CRAB HANDHOLE (after serial # LA)	085-100 & 090-100
12A	WTR1101	HANDHOLE JACKET COVER	076-075 & 080-075
12A	WTR1101	HANDHOLE JACKET COVER (after serial # LA)	085-100 & 090-100
13	BLT1021	NUT FOR CRAB HANDHOLE (after serial # LA)	085-100 & 090-100
13A	BLT1022	SCREW HANDHOLE JACKET COVER	076-075 & 080-075
13A	BLT1022	SCREW HANDHOLE JACKET COVER (after serial # LA)	085-100 & 090-100
14	DRV2508	BRASS DRAIN VALVE	ALL
15	TST1127	GAS VAVLE/THERMOSTAT NATURAL (180 degree)	065-050
15	TST1193	GAS VALVE/THERMOSTAT NATURAL (180 degree)	076-075 & 080-075
15	TST1036	GAS VALVE/THERMOSTAT NATURAL (180 degree)	085-100 & 090-100
15A	TST1161	GAS VAVLE/THERMOSTAT LPG (180 degree)	ALL
16	BNR1243	BURNER ASSEMBLY NAT	065-050
16	BNR1244	BURNER ASSEMBLY LPG	065-050
16	BNR1265	BURNER ASSEMBLY NAT	076-075
16	BNR1242	BURNER ASSEMBLY NAT	080-075
16	BNR1141	BURNER ASSEMBLY LPG	076-075 & 080-075
16	BNR1266	BURNER ASSEMBLY NAT	085-100
16	BNR1142	BURNER ASSEMBLY NAT	090-100
16	BNR1143	BURNER ASSEMBLY LPG	085-100 & 090-100
18	PLT1019	PILOT ASSEMBLY NAT	065-050 - 085-100
18	PLT1022	PILOT ASSEMBLY LPG	065-050 - 085-100
18	PLT1017	PILOT ASSEMBLY NAT	090-100
18	PLT1018	PILOT ASSEMBLY LPG	090-100
20	ORF1023-27	ORIFICE, NAT (#27)	065-050
20	ORF1024-43	ORIFICE, LPG (#43)	065-050
20	ORF1023-22	ORIFICE, NAT (#22)	080-075
20	ORF1024-38	ORIFICE, LPG (#38)	080-075
20	ORF1023-20	ORIFICE, NAT (#20)	090-100
20	ORF1024-37	ORIFICE, LPG (#37)	090-100
23	PLT1112	THERMOCOUPLE	ALL
26	JKT1150	DOOR INNER	065-50
26A	JKT1151	DOOR INNER	076-075 to 090-100
27	JKT1050	DOOR OUTER	065-050
27A	JKT1051	DOOR OUTER	076-075 to 090-100

Please provide model & serial number when ordering parts.