


WIRING NOTE: REMOVE JUMPER BETWEEN R(1) & W(1) TO CONNECT-I.O. RESET, REMOTE OPERATOR, FLOW SWITCH OR MOD-U-PAK. WIRE ALL SWITCHES AND CONTROLS TO "R(1)" AND "W(1)" OR "B" AND "X" IN SERIES TO SCREW TERMINALS. FOR INTERMITTENT PUMP OPERATION REMOVE BRASS JUMPER FROM TERMINALS "R1" AND "W1" AND CONNECT AN EXTERNAL TEMPERATURE CONTROL. FOR CONTINUOUS PUMP OPERATION CONNECT THE ORANGE JUMPER BETWEEN TERMINALS "R1" AND "A".

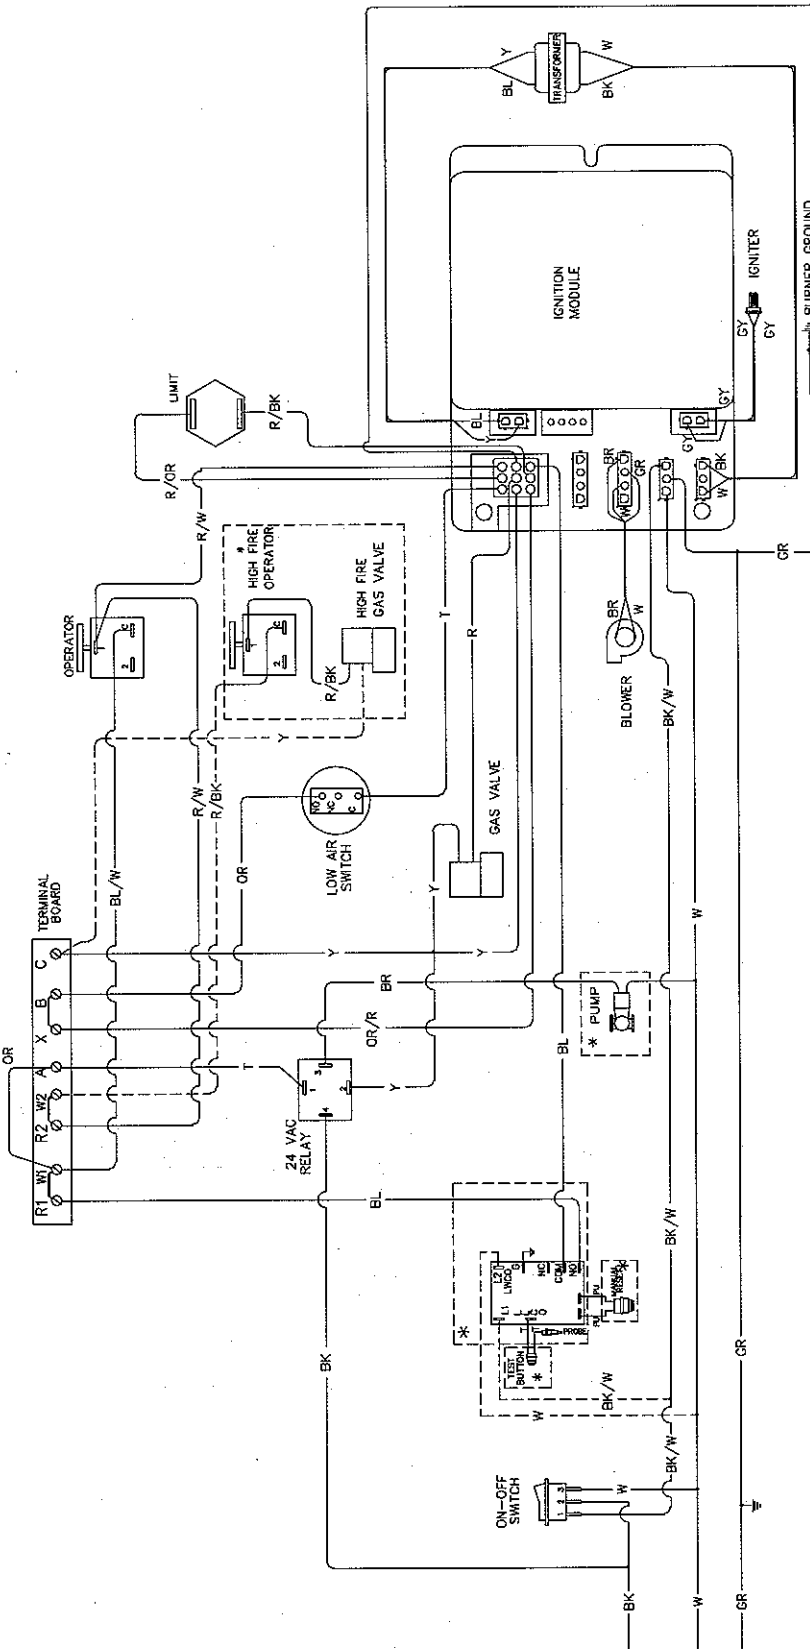

LBL2078 REV H

EB 150-300 F/MS NAT. & LP GAS

IF EQUIPPED  
OPTIONS: STANDARD, NO OPTIONS

LBL2078 REV H




Lochinvar Corporation • 300 Maddox Simpson Pkwy • Lebanon, TN 37090 • 615-889-8900/Fax: 615-547-1000  
www.Lochinvar.com

# EFFICIENCY+® BOILER WIRING DIAGRAMS

## LADDER WIRING DIAGRAM - HOT SURFACE IGNITION-M9

EB 100-300

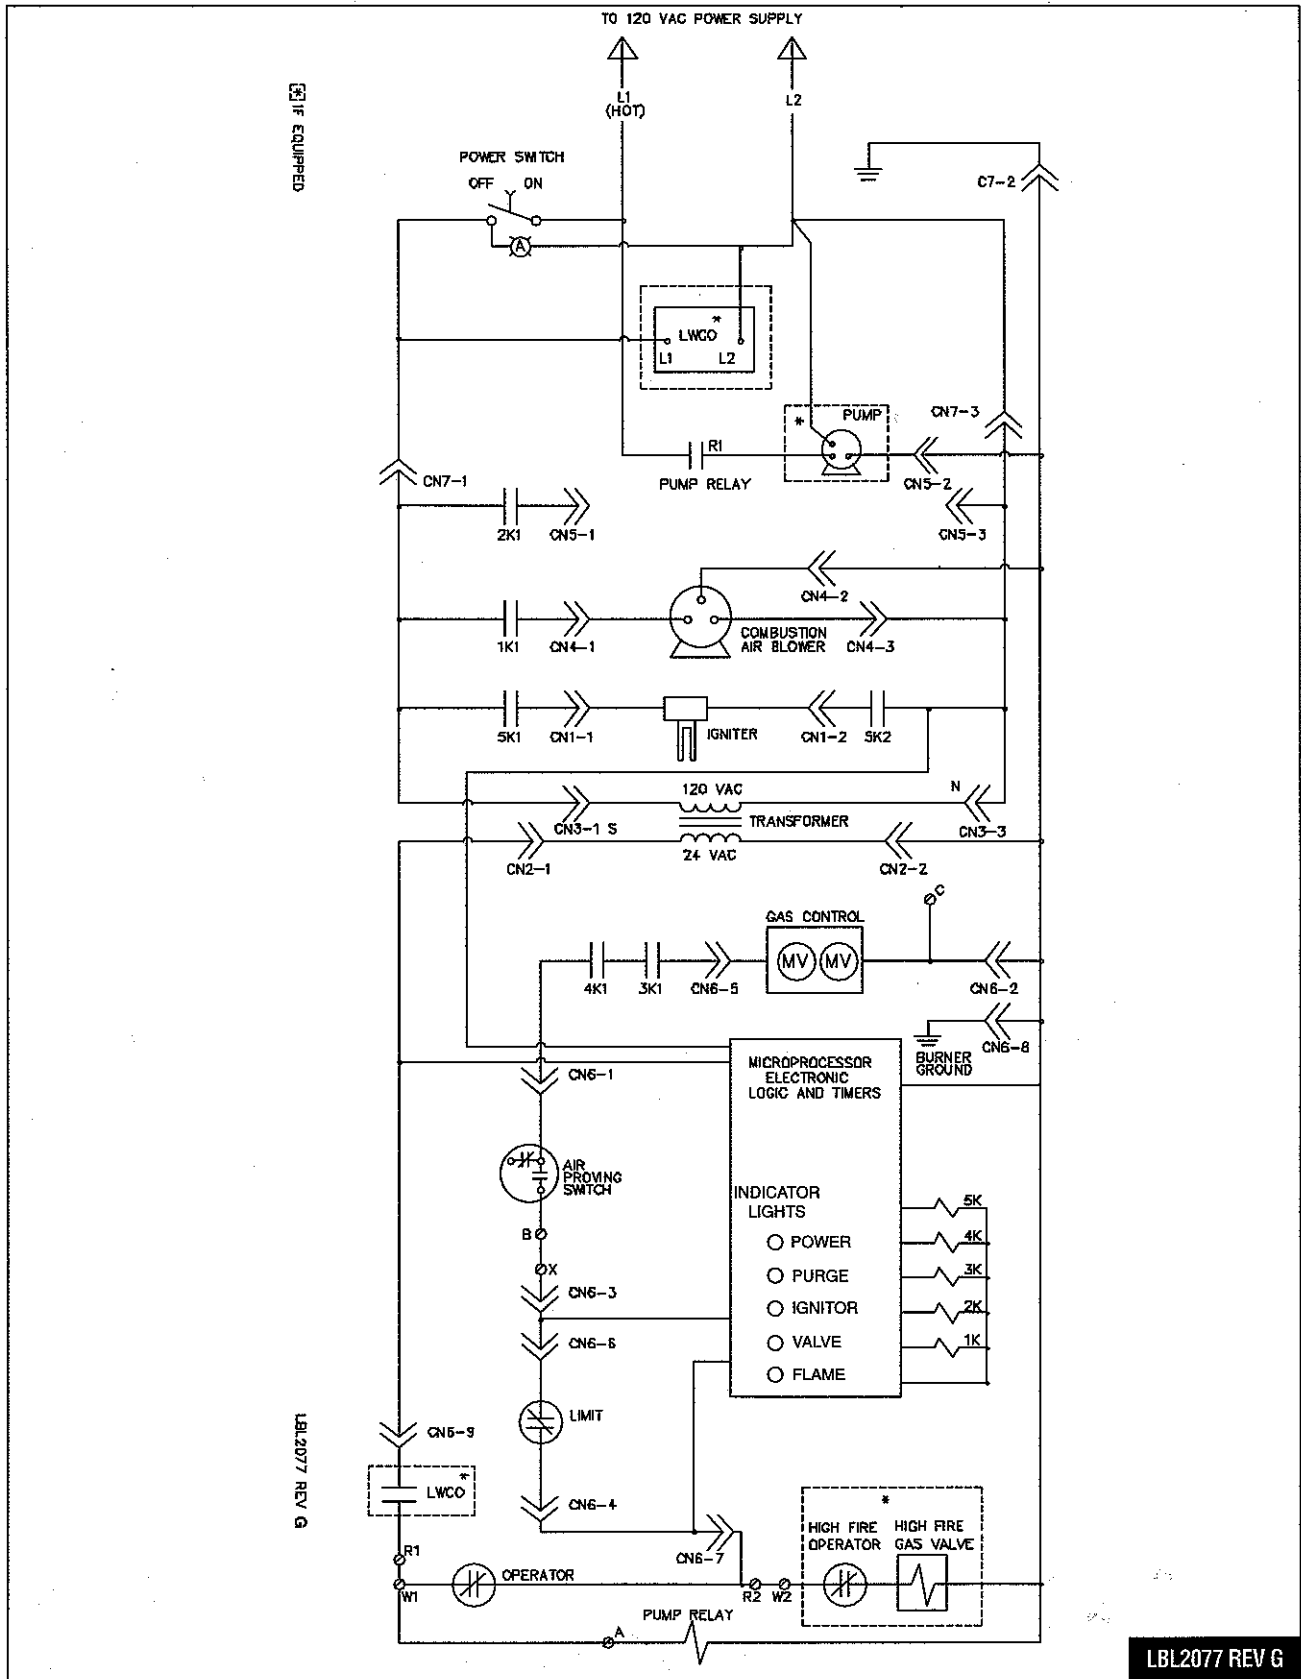

LBL2077 REV G